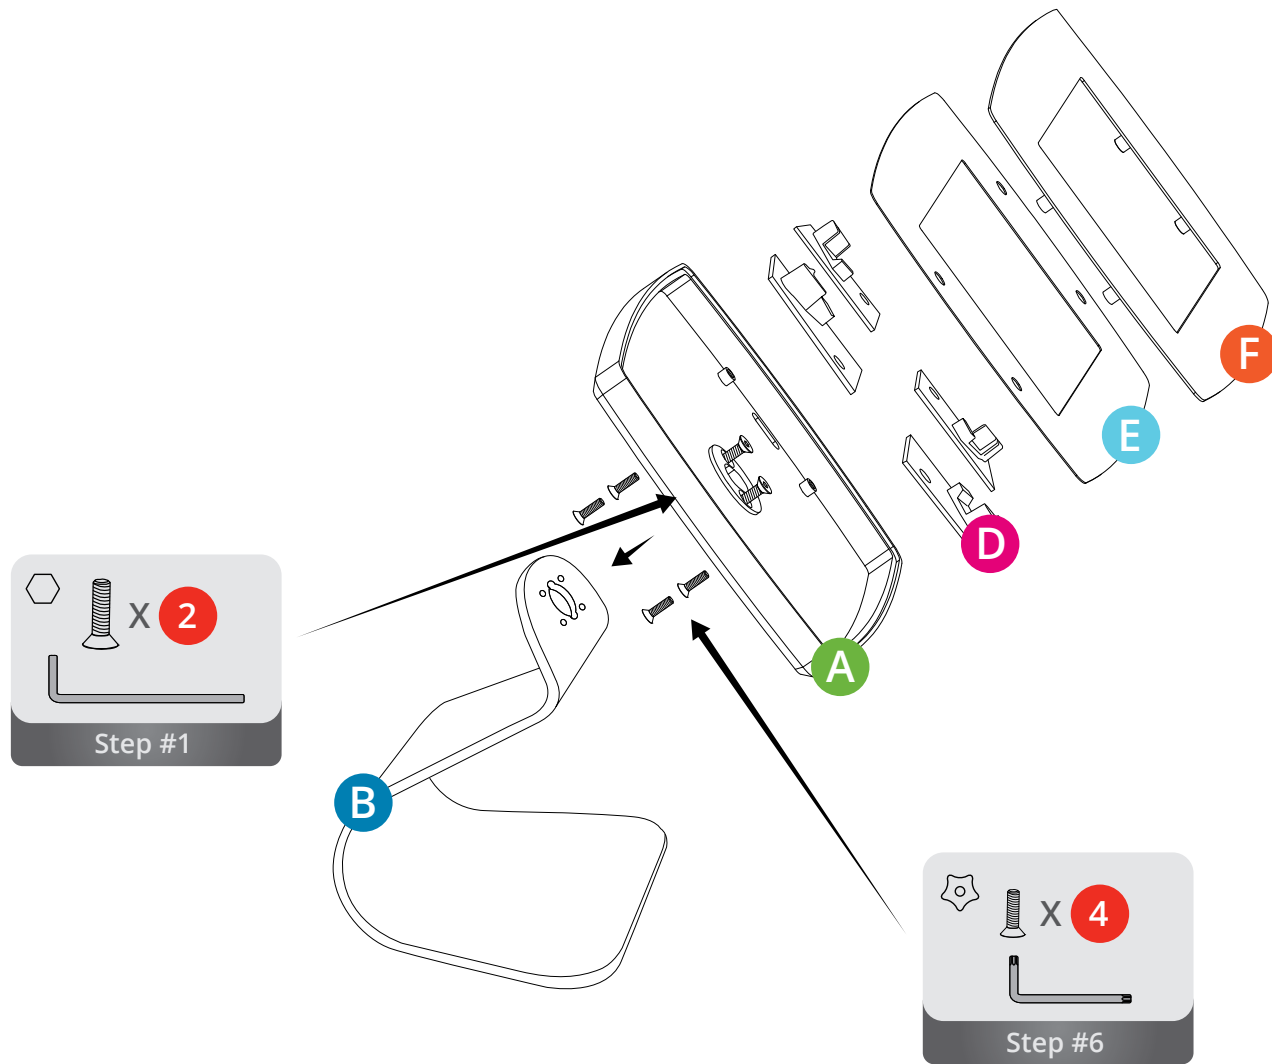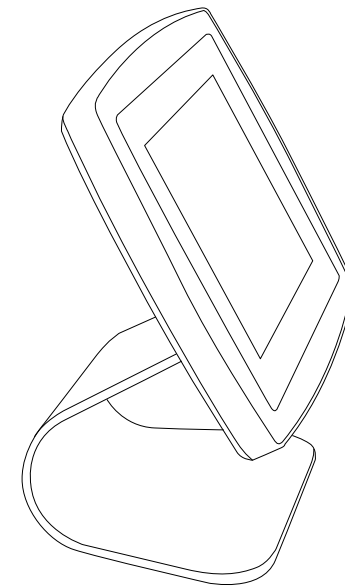# ARMODILO™

Curve Tablet Stand

Curve Assembly

01 Connect **A** to **B** using two screws

02 Insert 4 x **D** into **A**

03 Insert your tablet

04 Cover Tablet with **E**
    Remove protective plastic on first use

05 Cover **E** with **F**

06 Secure **F** by putting 4 security screws
    in through the back of **A**

F

E

D

A

B

◯ 🔩 X **2**

Step #1

✿ 🔩 X **4**

Step #6

Fully Assembled Unit